

FOUNDATIONLESS JIB



FREESTANDING JIB



TIME

Poured foundations can take weeks to cure before you can install the jib. **Reduce downtime** with a quick, efficient foundationless installation.





MONEY

Installing a poured foundation can cost as much or more than the jib crane itself. You can **save upwards of \$5,000** when comparing the complete costs.



MOBILITY

Foundationless jibs give you **greater flexibility** in your initial install location. It's also easy to relocate a jib when there's no poured foundation. When your operation changes, your Gorbel foundationless jib can keep up with the change.

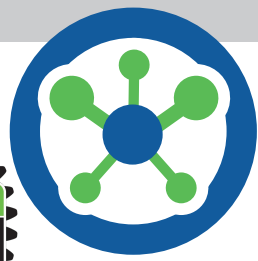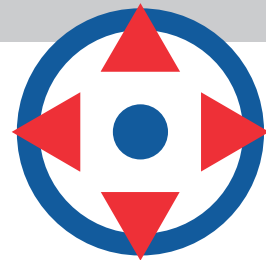

SIMPLICITY

Pouring a foundation requires coordinating contractors, syncing multiple schedules, and potentially shutting down production. **Decrease the disruption** and control the chaos with our foundationless design.

