





Reversible Gate Lock Instructions

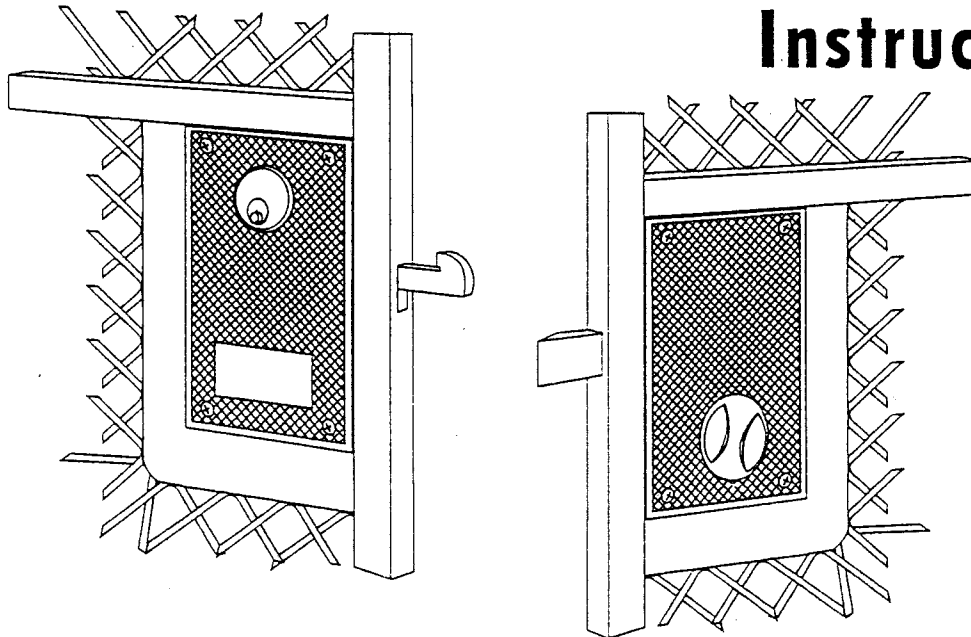

US Patent #4,875,725 "No fall out" feature.
Parts will not fall out when cover is removed.

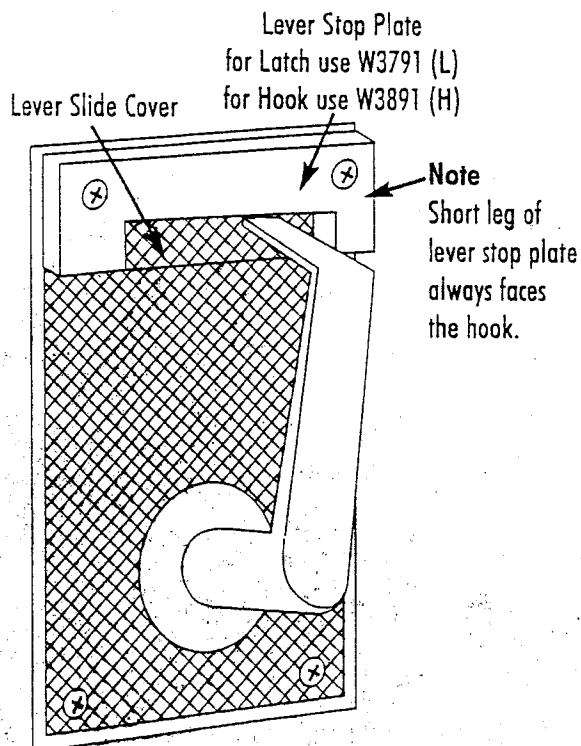

To Install Interior Lever

1. Place spring over post and engage fork as shown in "How to Assemble" section.
2. Attach lever assembly in cover and fasten with two screws.
3. Assemble case in lock frame and attach interior lever-cover assembly.
4. Attach plastic lever slide cover and lever stop plate with top two screws. Use plate marked "L" for latches or plate marked "H" for hooks.

w.w.Cannon, Inc.

Design. Layout. Build. Install.

1-800-442-3061
www.wwcannon.com

1-3800 3-2000

How to Assemble Hook & Latch Gate Locks

SPECIAL FEATURE

If assembled properly, all parts will remain in position when lock is inverted.

HOOK

Assembly


Thread cylinder completely into case. With cam in vertical position, tighten cylinder set with a screw.

While compressing spring on hook assembly, place over either post for left or right handing.

Washer fits in the recess of the cradle when the spring is released. Position the fork as shown so that it's movement retracts hook.

To Reverse

Compress spring on hook assembly and lift out. Re-insert on opposite post.

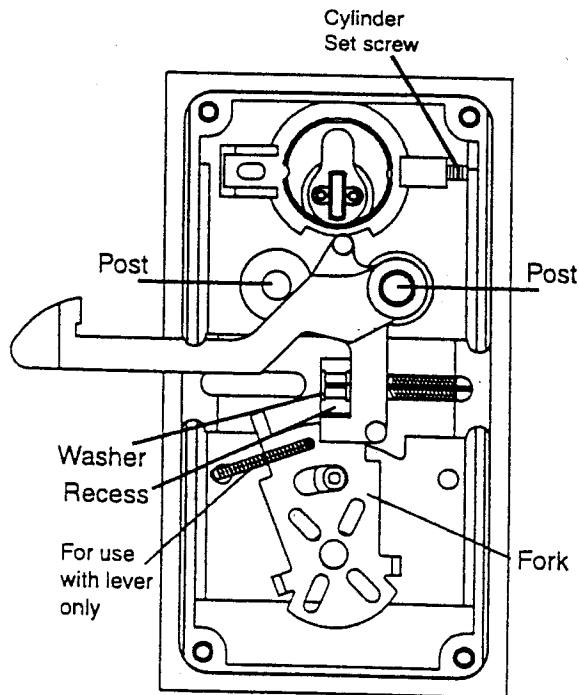

LATCH

Assembly

Thread cylinder completely into case. With cam in vertical position, tighten cylinder set with a screw.


Engage latch lever with pin on latch adapter and place over either post.

Note: Notched end of latch lever must be on outside leg of fork. Retract washer on latch rod to compress spring. Place in cradle so end of latch stop overlaps edge of latch lever. Washer must fit in recess of cradle when spring is released. Face latch nose in desired direction for swing of door.

To Reverse

Compress spring on latch assembly and lift out. Re-position latch lever and latch adapter on opposite post.

Re-insert latch in opposite direction.

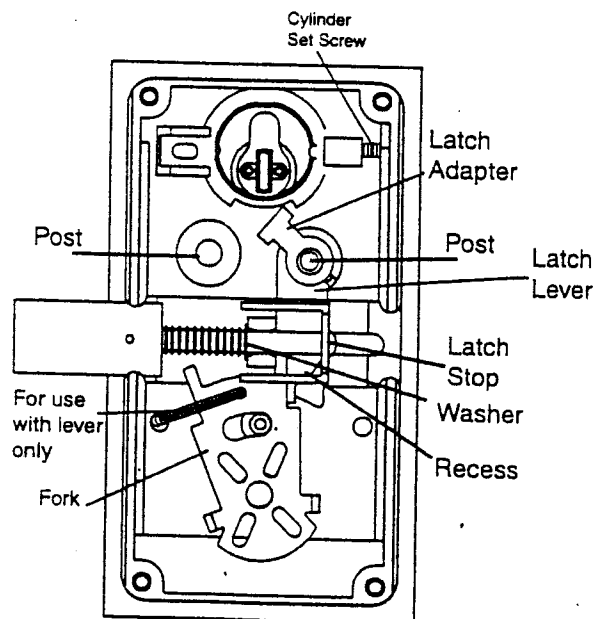

w.w.Cannon, Inc.

Design. Layout. Build. Install.

1-800-442-3061

www.wwcannon.com

How to Install

Single & Double Cylinder Models

Figure 3

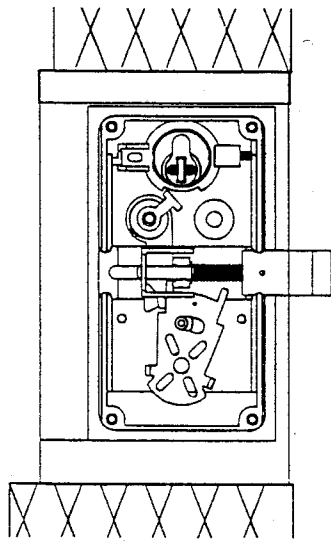


Figure 4


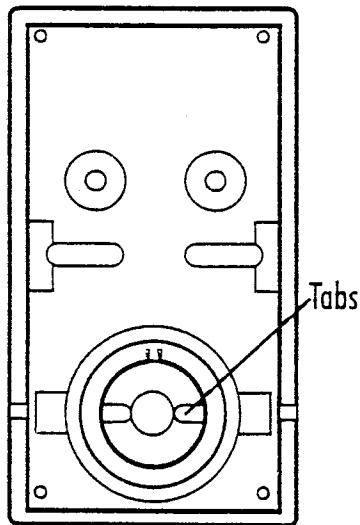


Figure 5

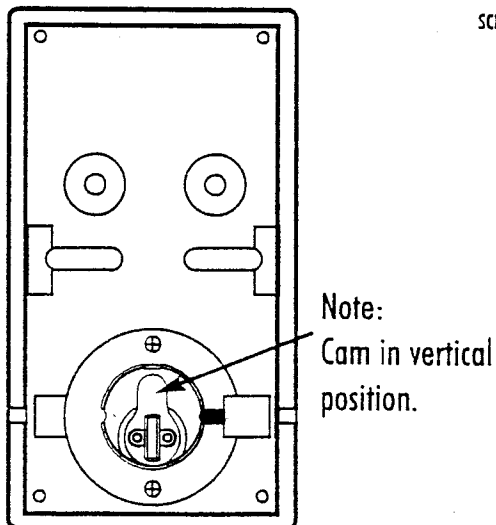

To Install

Insert assembled case from outside into lock frame of gate. (See Figure 3)

Single Cylinder Models

From inside, place cover over case. Engage thumb-piece tabs with slots in fork. (See Figure 4) Test thumb turn operation.

Insert and tighten case screws.

Double Cylinder Models


1. Screw cylinder completely into double cylinder collar and tighten cylinder set screw.
2. Install cylinder/collar assembly in cover and fasten with 2 screws. Cam should be in vertical position as shown in Figure 5.
3. From inside, place cover over case. Tighten case screws.

w.w.Cannon, Inc.


Design. Layout. Build. Install.

1-800-442-3061
www.wwcannon.com

Gate Lock Parts

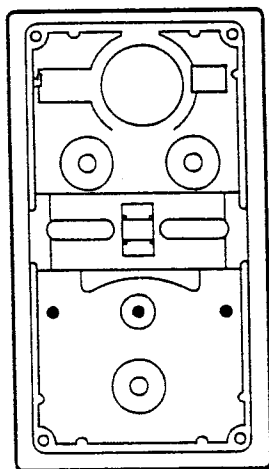


W3703
Case

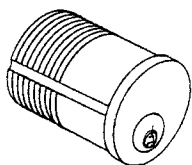


2122
Cylinder




5051 Cylinder Set Screw
8-32
Allen head

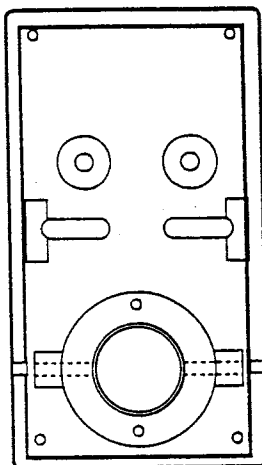


W3701
Cover

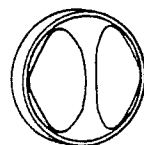


W3708
Turnpiece

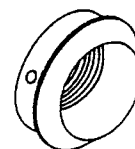


W3751
Double Cylinder
Collar
with set screw

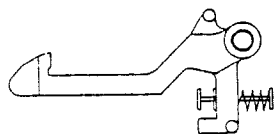


WA3806 to W3836
Hook Assembly




WA3715 to WA3745
Latch Assembly

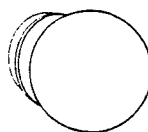


WA9253
Interior Knob Assembly

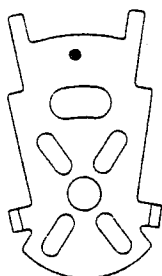


W3704
Fork




W3705
Latch Lever

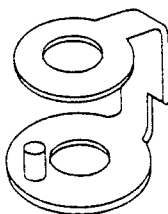


WA3706
Latch Adapter

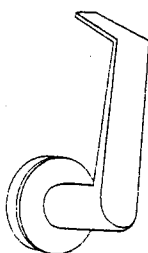


WA9293
Interior Lever Assembly
Use with W3791 or W3891

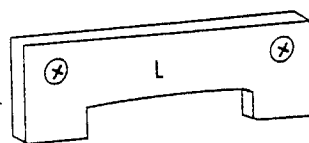

W3791 Lever Stop Plate (latch)

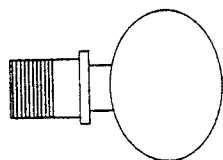


WA9251
Exterior Knob

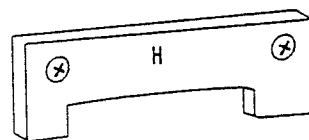


W3891 Lever Stop Plate (hook)



9005
Case Screws



1083
Retainer/Fork Screw



W3892 Lever Slide Cover